

## **Perfect Fire II Model DTP-56DC-E OEM SETTINGS**

Note the below procedure is to reset the OEM values. If the incorrect numbers are fed into the controller permanent damage may result.

1. Turn power off.
2. Hold down the "Select" key and turn the power on at the same time.
3. Display should read "2371" if not, use Up & Down buttons to alter display.
4. Press "Enter" to store value (display should flash ).
5. Press "Select".
6. Display should read "103" if not, use Up & Down buttons to alter display.
7. Press "Enter" to store value (display should flash ).
8. Press "Select".
9. Display should read "200" if not, use Up & Down buttons to alter display.
10. Press "Enter" to store value (display should flash ).
11. Press "Select".
12. Display should read "54" if not, use Up & Down buttons to alter display
13. Press "Enter" to store value (display should flash ).
14. Press "Select".
15. Display should read "108" if not, use Up & Down buttons to alter display.
16. Press "Enter" to store value (display should flash ).
17. Press "Select".
18. Display should read "2371" again.
19. Press "Start" three times until the orange light moves to "Temp Off"

The resetting of the OEM is now complete and any error should have been cleared. When carrying out this procedure the OEM chip should normally be replaced. If this has not been done the kiln should not be left unsupervised when firing.